



Marv Full Size LED Light Bars



1. Technical parameter:


ITEM	Marv
Working voltage	DC10-30V
Light power	3W LEDs
Light length	18"/27"/36"/48"/55" L*11.4" W*3.4" H (with feet)
Light color	single, split color
Bulb mode	LED
Temperature	-30--+70°C
Polarity	Light frame is cathode

2. Sketch map:



3. Installation & Mounting:

1. According to bracket assemblage map, loosen off bracket screw, make two horses glide freely to where is eudipleural place on auto roof, then screw down.
2. In terms of map, put hook in laundrer, then fasten hexangular bolt which is in horse by large-size screw driver.
3. Examine all fixed parts before using.
4. Connect controller and wiring: Install the controller on the convenience operation place of car cab.
5. Connect the red wire to positive pole, connect the black one to negative pole.
6. If using warning light is on parking time, please do not let auto flame out so as to keep power normal.

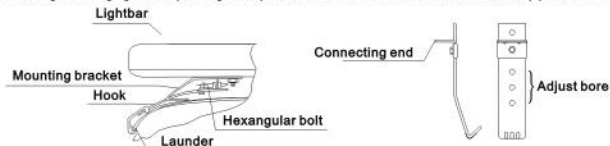

4. Maintenance:

1. If lamp or siren can not work normally, examine whether fuse burn out or not. Please replace it in time.
2. Because of high current and low voltage, we need to set up proper using caution and protection of security with wiring. If there are wrong wiring and short circuit, this will cause to injured, fired or vehicle damaged etc.
3. The bulbs will be hot when working, please cool bulbs completely before attempting to remove. Gloves and eye protection should be worn when handing halogen lamps as they are pressurized and accidental breakage can result in flying glass. Disconnect from power and wait 10 minutes prior to servicing or trouble shooting.

UNIT SIGNAL, INC.

www.unitsignal.com

